


# Panasonic®

## Basic Operating Instructions Digital Camera

Model No. **DMC-FZ45**

# LUMIX

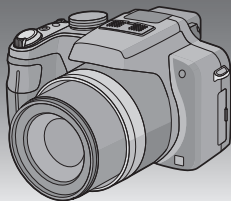

Before use, please read these instructions completely.



**Please also refer to the Operating Instructions (PDF format) contained on the CD-ROM (supplied).**



You can learn about advanced operation methods and check the Troubleshooting.

Web Site: <http://www.panasonic-europe.com>

Model number suffix "EB" denotes UK model.

## Dear Customer,

We would like to take this opportunity to thank you for purchasing this Panasonic Digital Camera. Please read these Operating Instructions carefully and keep them handy for future reference. Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

## Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

## Information for Your Safety

### WARNING:

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,**

- **DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.**
- **USE ONLY THE RECOMMENDED ACCESSORIES.**
- **DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.



## ■ Product identification marking

Product	Location
Digital camera	Bottom
Battery charger	Bottom

## Caution for AC mains lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug. Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

### CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.


If a new plug is to be fitted please observe the wiring code as stated below. If in any doubt please consult a qualified electrician.

## ■ IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue. The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

**WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.**

**THIS PLUG IS NOT WATERPROOF-KEEP DRY.**

### ■ Before use


Remove the connector cover.

### ■ How to replace the fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

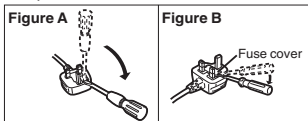

 2. Replace the fuse and close or attach the fuse cover.



## ■ About the battery pack

### **CAUTION**

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

### **Warning**

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C or incinerate.

## ■ About the battery charger

### CAUTION!

- **DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.**
- **DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.**
- **DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.**
- **DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.**

- The battery charger is in the standby condition when the AC power supply cord is connected. The primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

### ■ Cautions for Use

- Do not use any other AV cables except the supplied one.
- Do not use any other USB connection cables except the supplied one.
- Always use a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).

Part numbers: RP-CDHM15 (1.5 m) (5 feet), RP-CDHM30 (3.0 m) (10 feet)

### **Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).**

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (DMW-AC8E; optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

### **Do not use this unit near radio transmitters or high-voltage lines.**

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

## Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



### **For business users in the European Union**

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

### **[Information on Disposal in other Countries outside the European Union]**

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



Cd

### **Note for the battery symbol (bottom two symbol examples):**

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

 



 





# Contents

Information for Your Safety .....	2
Standard Accessories .....	8
Names of the Components .....	10
Charging the Battery .....	13
About the Built-in Memory/the Card .....	15
Inserting and Removing the Card (optional)/the Battery .....	16
Setting Date/Time (Clock Set).....	17
• Changing the clock setting .....	17
Setting the Menu .....	18
Selecting the [REC] Mode.....	19
Taking pictures using the automatic function	
([IA]: Intelligent Auto Mode).....	21
• Scene Detection.....	22
• AF Tracking Function.....	22
Taking pictures with your favourite settings	
([P]: Programme AE Mode).....	23
• Programme shift.....	24
Compensating the Exposure .....	25
Taking pictures by specifying the aperture/shutter speed .....	26
• ([A] Aperture-Priority AE .....	26
• ([S] Shutter-Priority AE .....	26
Taking picture by setting the exposure manually .....	27
Recording Motion Picture .....	28
Playing back Pictures ([NORMAL PLAY]).....	29
Deleting Pictures .....	29
Reading the Operating Instructions	
(PDF format) .....	30
Specifications .....	32

# Standard Accessories

Check that all the accessories are supplied before using the camera.  
Product numbers correct as of July 2010. These may be subject to change.

  - 1 Battery Pack  
(Indicated as **battery pack** or **battery** in the text)  
Charge the battery before use.
  - 2 Battery Charger  
(Indicated as **battery charger** or **charger** in the text)
  - 3 AC Mains Lead
  - 4 USB Connection Cable
  - 5 AV Cable
  - 6 CD-ROM
    - Software:  
Use it to install the software to your PC.
  - 7 CD-ROM
    - Operating Instructions
  - 8 Shoulder Strap
  - 9 Lens Cap/Lens Cap String
  - 10 Lens Hood
- SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as **card** in the text.
  - **The card is optional.**  
**You can record or play back pictures on the built-in memory when you are not using a card.**
  - Consult the dealer or your nearest Service Centre if you lose the supplied accessories. (You can purchase the accessories separately.)

1  DMW-BMB9E	2  DE-A84A
3  K2CT39A00002	4  K1HA14AD0003
5  K1HA14CD0004	6 
7  VFF0678	8  VFC4453
9  VYQ5607	10  VYQ5606



## Sales and Support Information

### Customer Care Centre

- For customers within the UK: 0844 844 3852
- For customers within the Republic of Ireland: 01 289 8333
- Visit our website for product information  
[www.panasonic.co.uk](http://www.panasonic.co.uk).
- E-mail: [customer.care@panasonic.co.uk](mailto:customer.care@panasonic.co.uk)

### Technical Support for AV Software

- For customers within the UK: 0844 844 3869
- For customers within the Republic of Ireland: 01 289 8333

### Direct Sales at Panasonic UK

- For customers: 0844 844 3856
- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday–Thursday 9.00 a.m. – 5.30 p.m., Friday 9.30 a.m. – 5.30 p.m. (Excluding public holidays)
- Or go on line through our Internet Accessory ordering application at [www.pas-europe.com](http://www.pas-europe.com).
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

### ■ Optional Accessories

- |   |                                       |
|---|---------------------------------------|
| • Battery Pack<br>DMW-BMB9E   | • AC Adaptor*1<br>DMW-AC8EB           |
| • HDMI mini cable:<br>RP-CDHM15E/RP-CDHM30E   | • DC Coupler*1<br>DMW-DCC6F           |
| • PL Filter/MC Protector/ND Filter<br>DMW-LPL52E/DMW-LMC52E/<br>DMW-LND52E  | • Tele Conversion Lens*2<br>DMW-LT55E |
| • Close-up Lens*2<br>DMW-LC55E  | • Lens Adapter*2<br>DMW-LA5E          |
| • SDXC Memory Card<br>64 GB: RP-SDW64GE1K<br>48 GB: RP-SDW48GE1K  |                                       |
| • SDHC Memory Card<br>32 GB: RP-SDW32GE1K/RP-SDP32GE1K<br>24 GB: RP-SDP24GE1K<br>16 GB: RP-SDW16GE1K/RP-SDP16GE1K<br>8 GB: RP-SDW08GE1K/RP-SDP08GE1K/RP-SDR08GE1A<br>4 GB: RP-SDW04GE1K/RP-SDP04GE1K/RP-SDR04GE1A |                                       |
| • SD Memory Card<br>2 GB: RP-SDP02GE1K/RP-SDR02GE1A   |                                       |


\*1 The AC Adaptor (optional) can only be used with the designated Panasonic DC Coupler (optional). The AC adaptor (optional) cannot be used by itself.

\*2 The lens adapter (optional) is necessary to attach a tele conversion lens or close-up lens.


Some optional accessories may not be available in some countries.

# Names of the Components

- 1 Lens
- 2 Flash
- 3 Self-Timer indicator  
AF assist lamp
- 4 Lens hood attachment part

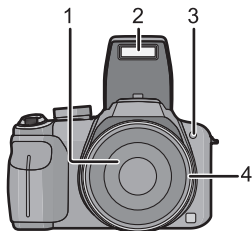


- 5 [Q.MENU] button/Delete button
- 6 [DISPLAY] button
- 7 [AF/AF-LOCK/MF] button
- 8 LCD monitor
- 9 Flash open button
- 10 Diopter adjustment dial
- 11 Viewfinder
- 12 [EVF/LCD] button
- 13 [AF/AE LOCK] button

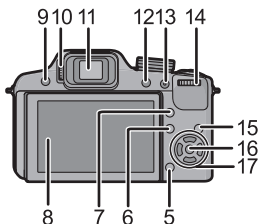


- 14 Rear dial

Rear dial is described as follows in these operating instructions.

 e.g.: Rotating left or right



e.g.: Pressing the rear dial

 


- 15 Playback button
- 16 [MENU/SET] button

## 17 Cursor buttons

◀/ Self-Timer button

▼/ Function button

Assign [REC] Mode menu to ▼ button. It is convenient to register [REC] Mode menu that is used often.

 
[ASPECT RATIO]/[QUALITY]/[METERING MODE]/[WHITE BALANCE]/  
[1.EXPOSURE]/[COLOR EFFECT]/[GUIDE LINE]/[ REC AREA]/  
[REMAINING DISP.]

▶/ ISO

▲/ Exposure compensation/

Auto Bracket/Flash output adjustment

In these operating instructions, the cursor buttons are described as shown in the figure below or described with ▲/▼/◀/▶.  
e.g.: When you press the ▼ (down) button



or

**Press ▼**

18 Stereo microphone

19 Zoom lever

20 Shutter button


21 Motion picture button

22 [FOCUS] button

23 Power lamp

24 Camera ON/OFF switch

25 Mode dial

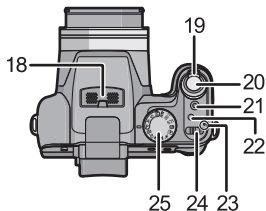


26 Shoulder strap eyelet


27 [HDMI] socket

28 [AV OUT/DIGITAL] socket


29 Terminal door

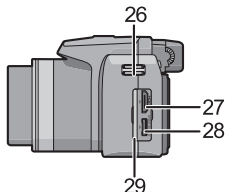

- 30 Speaker  
31 Lens barrel

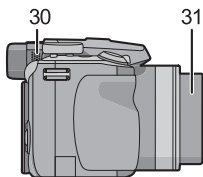

- 32 Release lever  
33 Tripod receptacle  
• When you use a tripod, make sure the tripod is stable when the camera is attached to it.  
34 Card/Battery door  
35 DC coupler cover

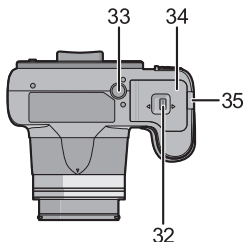

- When using an AC adaptor, ensure that the Panasonic DC coupler (DMW-DCC6; optional) and AC adaptor (DMW-AC8E; optional) are used.
- Always use a genuine Panasonic AC adaptor (DMW-AC8E; optional).
- When using an AC adaptor, use the AC Mains Lead supplied with the AC adaptor.
- We recommend you use a battery with sufficient battery power or the AC adaptor when recording motion pictures.
- If while recording motion pictures using the AC adaptor and the power supply is cut off due to a power outage or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.

## Charging the Battery

### ■ About batteries that you can use with this unit

The battery that can be used with this unit is DMW-BMB9E.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.


- Use the dedicated charger and battery.
- The camera has a function for distinguishing batteries which can be used safely. The dedicated battery (DMW-BMB9E) supports this function. The only batteries suitable for use with this unit are genuine Panasonic products and batteries manufactured by other companies and certified by Panasonic. (Batteries which do not support this function cannot be used). Panasonic cannot in any way guarantee the quality, performance or safety of batteries which have been manufactured by other companies and are not genuine Panasonic products.

### ■ Charging

- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.
- It is recommended to charge the battery in a temperature between 10 °C to 30 °C (50 °F to 86 °F). (The battery temperature should also be the same.)


1

**Attach the battery paying attention to the direction of the battery.**

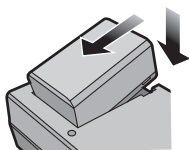

**2****Connect the AC mains lead.**

- Disconnect the charger from the electrical socket and detach the battery after charging is completed.

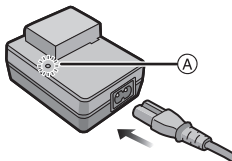**About the [CHARGE] indicator****The [CHARGE]****indicator turns on:**

The [CHARGE] indicator (A) is turned on and charging will start.

**The [CHARGE]****indicator turns off:**

The [CHARGE] indicator (A) of the charger will turn off once the charging has completed without any problem.

**When the [CHARGE] indicator flashes**

- The battery temperature is too high or too low. It is recommended to charge the battery again in an ambient temperature of between 10 °C to 30 °C (50 °F to 86 °F).
- The terminals of the charger or the battery are dirty. In this case, wipe them with a dry cloth.

**Charging**

<b>Charging time</b>	<b>Approx. 155 min</b>
----------------------	------------------------

**Recording still pictures (When using the LCD monitor/Viewfinder)**

<b>Number of recordable pictures</b>	<b>Approx. 580 pictures</b>	(By CIPA standard in Programme AE Mode)
<b>Recording time</b>	<b>Approx. 290 min</b>	

**Recording conditions by CIPA standard**

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- Temperature: 23 °C (73.4 °F)/Humidity: 50%RH when LCD monitor is on.
- Using a Panasonic SD Memory Card (32 MB).
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on. (When the Optical Image Stabilizer Function is set to [AUTO].)
- **Recording once every 30 seconds** with full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

**Playback (When using the LCD monitor/Viewfinder)**

<b>Playback time</b>	<b>Approx. 540 min</b>
----------------------	------------------------

# About the Built-in Memory/the Card

## Built-in Memory

### • Memory size: Approx. 40 MB

- The built-in memory can be used as a temporary storage device when the card being used becomes full.
- The access time for the built-in memory may be longer than the access time for a card.

## Card

The following cards which conform to the SD video standard can be used with this unit.

(These cards are indicated as **card** in the text.)

Type of card which can be used with this unit	Remarks
SD Memory Card (8 MB to 2 GB)	<ul style="list-style-type: none"><li>• SDHC Memory Card can be used with SDHC Memory Card or SDXC Memory Card compatible equipment.</li><li>• SDXC Memory Card can only be used with SDXC Memory Card compatible equipment.</li><li>• Check that the PC and other equipment are compatible when using the SDXC Memory Cards.</li></ul> <p><a href="http://panasonic.net/avc/sdcard/information/SDXC.html">http://panasonic.net/avc/sdcard/information/SDXC.html</a></p>
SDHC Memory Card (4 GB to 32 GB)	
SDXC Memory Card (48 GB, 64 GB)	

- Only cards bearing the SDHC logo (indicating that the card conforms to SD video standards) may be used as 4 GB to 32 GB cards.
- Only cards bearing the SDXC logo (indicating that the card conforms to SD video standards) may be used as 48 GB, 64 GB cards.
- Use a card with SD Speed Class\* with "Class 4" or higher when recording motion pictures in [AVCHD Lite]. Also, use a card with SD Speed Class with "Class 6" or higher when recording motion pictures in [MOTION JPEG].
  - \* SD Speed Class is the speed standard regarding continuous writing.
- Please confirm the latest information on the following website.

<http://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)



### Note


- Keep the Memory Card out of reach of children to prevent swallowing.

# Inserting and Removing the Card (optional)/the Battery

- Turn the power switch to [OFF] and confirm that the lens barrel is retracted.
- Close the flash.
- We recommend using a Panasonic card.


**1** Slide the release lever in the direction of the arrow and open the card/battery door.

- Always use genuine Panasonic batteries (DMW-BMB9E).
- If you use other batteries, we cannot guarantee the quality of this product.

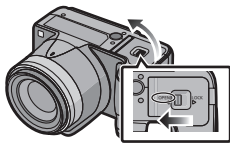

**2** Battery: Insert until it is locked by the lever (A) being careful about the direction you insert it. Pull the lever (A) in the direction of the arrow to remove the battery.

**Card:** Push it fully until it clicks being careful about the direction you insert it. To remove the card, push the card until it clicks, then pull the card out upright.

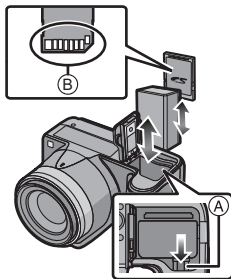


(B): Do not touch the connection terminals of the card.

- The card may be damaged if it is not fully inserted.

**3** ①: Close the card/battery door.

②: Slide the release lever in the direction of the arrow.

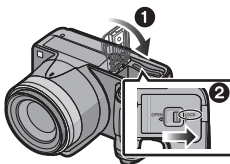




# Setting Date/Time (Clock Set)

- The clock is not set when the camera is shipped.

## 1 Turn the camera on.

- (A) [MENU/SET] button
- (B) Cursor buttons
- The lens barrel extends.

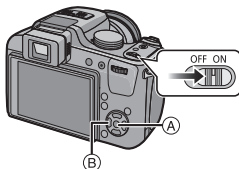

## 2 Press [MENU/SET].

## 3 Press ◀/▶ to select the items (year, month, day, hour, minute, display sequence or time display format), and press ▲/▼ to set.

- You can cancel without setting the clock by pressing [RECALL].



## 4 Press [MENU/SET] to set.

## 5 Press [MENU/SET].

- Press [RECALL] to return to the settings screen.

## Changing the clock setting

Select [CLOCK SET] in the [REC] or [SETUP] menu, and press ▶.

- It can be changed in steps 3 and 4 to set the clock.

# Setting the Menu

This section describes how to select the Programme AE Mode settings, and the same setting can be used for the [MOTION PICTURE] menu, [PLAYBACK] menu and [SETUP] menu as well.

Example: Setting [AF MODE] from [■] to [👤] in the Programme AE Mode.

**1 Press [MENU/SET] to display the menu.**



**2 Press ▲/▼ to select [AF MODE], and then press ►.**

- Depending on the item, its setting may not appear or it may be displayed in a different way.



**3 Press ▲/▼ to select [👤] and then press [MENU/SET] to set.**



**4 Press [MENU/SET] to close the menu.**

## Switching to other menus

e.g.: Switching to the [SETUP] menu

- 1 Press [MENU/SET] to display the menu.**
- 2 Press ◀.**
- 3 Press ▼ to select the [SETUP] menu icon [🔧].**
- 4 Press ►.**


- Select a menu item next and set it.



## Selecting the [REC] Mode

### 1 Turn the camera on.


- The power lamp ② lights when you turn this unit on ①.

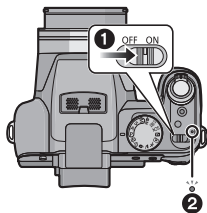

### 2 Switching the mode by rotating the mode dial.

Align a desired mode with part ①.

- Rotate the mode dial slowly and surely to adjust to each mode. (The mode dial rotates 360°)

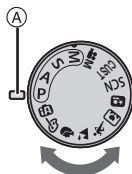

## Basic

### **iA** Intelligent Auto Mode

The subjects are recorded using settings automatically selected by the camera.

### **P** Programme AE Mode

The subjects are recorded using your own settings.

## ■ Advanced

### **Aperture-Priority AE Mode**

The shutter speed is automatically determined by the aperture value you set.

### **Shutter-Priority AE Mode**

The aperture value is automatically determined by the shutter speed you set.

### **Manual Exposure Mode**

The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.

### **Creative Motion Picture Mode**

Record motion picture with manual settings.

### **Custom Mode**

Use this mode to take pictures with previously registered settings.

### **Scene Mode**

This allows you to take pictures that match the scene being recorded.

### **My Colour Mode**

Use this mode to check colouring effects, select a colour mode from among twelve colour modes, and then take pictures.

## ■ Advanced Scene Mode

### **Portrait Mode**

Use this mode to take pictures of people.

### **Scenery Mode**

Use this mode to take pictures of scenery.

### **Sports Mode**

Use this mode to take pictures of sporting events, etc.

### **Close-up Mode**

Use this mode to take pictures of a close-by subject.

### **Night Portrait Mode**

Use this mode to take pictures of night scenes and people against night time scenery.

## Taking pictures using the automatic function

(**iA**): Intelligent Auto Mode)


The camera will set the most appropriate settings to match the subject and the recording conditions so we recommend this mode for beginners or those who want to leave the settings to the camera and take pictures easily.

**1** Set the mode dial to [**iA**].

**2** Hold this unit gently with both hands, keep your arms still at your side and stand with your feet slightly apart.

**3** Press the shutter button halfway to focus.

- The focus indication ① (green) lights when the subject is focused.
- The AF area ② is displayed around the subject's face by the Face Detection function. In other cases, it is displayed at the point on the subject which is in focus.
- The focus range is 1 cm (0.04 feet) (Wide)/ 1 m (3.28 feet) (Tele) to  $\infty$ .

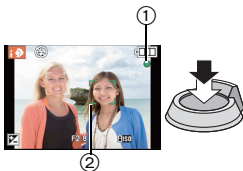









**4** Press the shutter button fully (push it in further), and take the picture.



## Scene Detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its colour changes to the usual red.

 →	 [i-PORTRAIT]	
	 [i-SCENERY]	
	 [i-MACRO]	
	 [i-NIGHT PORTRAIT]	• Only when [iA] is selected
	 [i-NIGHT SCENERY]	
	 [i-SUNSET]	
	 [i-BABY]	

- [iA] is set if none of the scenes are applicable, and the standard settings are set.
- When [iA], [iA] or [iA] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure. (**Face Detection**)

## AF Tracking Function

It is possible to set the focus to the specified subject.

### 1 Press [FOCUS].

- [iA] is displayed in the upper left of the screen.
- AF Tracking frame is displayed in the centre of the screen.
- Press [FOCUS] again to cancel.



FOCUS

### 2 Bring the subject to the AF Tracking frame, and press [AF/AE LOCK] to lock the subject.

- AF tracking frame will turn yellow.
- An optimum scene for the specified subject will be chosen.
- Press [FOCUS] to cancel.

AF/AE LOCK



[REC] Mode: **P**


## Taking pictures with your favourite settings

**(P)**: Programme AE Mode

The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.

You can take pictures with greater freedom by changing various settings in [REC] menu.

**1** Set the mode dial to **[P]**.

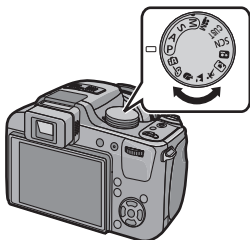

**2** Aim the AF area at the point you want to focus on.

**3** Press the shutter button halfway to focus.

- The focus range is 30 cm (0.99 feet) (Wide)/2 m (6.57 feet) (Tele) to  $\infty$ .



**4** Press the halfway pressed shutter button fully to take a picture.



## Programme shift

In Programme AE Mode, you can change the preset aperture value and shutter speed without changing the exposure. This is called programme shift.

You can make the background more blurred by decreasing the aperture value or record a moving subject more dynamically by slowing the shutter speed when taking a picture in Programme AE Mode.




- Press the shutter button halfway and then use the rear dial to activate programme shift while the aperture value and the shutter speed are displayed on the screen (about 10 seconds).
- The programme shift indication (A) appears on the screen when programme shift is activated.
- Programme shift is cancelled if the camera is turned off or the rear dial is rotated until the programme shift indication disappears.

### ■ Example of programme shift

(A): Aperture value

(B): Shutter speed

- ❶ Programme shift amount
- ❷ Programme shift line chart
- ❸ Programme shift limit

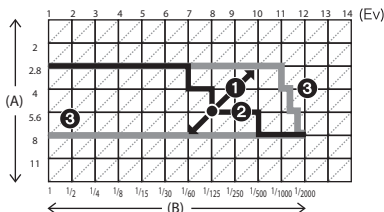



## Compensating the Exposure

Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background.

- 1 Press until [EXPOSURE] appears, compensate the exposure with / .**

- Select [0 EV] to return to the original exposure.

 



- 2 Press [MENU/SET] to finish.**

- You can also press the shutter button halfway to finish.

### ■ Operate with the rear dial

- 1 Press the rear dial to select , and then rotate the rear dial to compensate the exposure.**  
 (A) Exposure compensation value
- 2 Press the shutter button halfway to finish.**

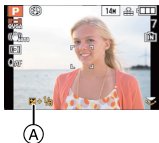

## Taking pictures by specifying the aperture/shutter speed

### **[A]** Aperture-Priority AE

Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

**1** Set the mode dial to **[A]**.

**2** Rotate the rear dial to set the aperture value.

**3** Take a picture.



### **[S]** Shutter-Priority AE

When you want to take a sharp picture of a fast moving subject, set with a faster shutter speed. When you want to create a trail effect, set to a slower shutter speed.

**1** Set the mode dial to **[S]**.

**2** Rotate the rear dial to set the shutter speed.

**3** Take a picture.



# Taking picture by setting the exposure manually

Determine the exposure by manually setting the aperture value and the shutter speed.

## 1 Set the mode dial to **[M]**.

- The Manual Exposure Assistance (A) appears for about 10 seconds.

## 2 Rotate the rear dial to set the aperture and shutter speed.

- (B) Aperture Value
- (C) Shutter Speed

- It will switch between aperture setting operation and shutter speed setting operation every time the rear dial is pressed.



## 3 Press the shutter button halfway.

- The Manual Exposure Assistance (A) appears for about 10 seconds.
- Set the aperture value and the shutter speed again when the exposure is not adequate.



## 4 Take the picture.

### Manual Exposure Assistance

	The exposure is adequate.
	Set to faster shutter speed or larger aperture value.
	Set to slower shutter speed or smaller aperture value.

- The Manual Exposure Assistance is an approximation.


## Recording Motion Picture

This can record high definition motion pictures compatible with the AVCHD format or motion pictures recorded in Motion JPEG.

Audio will be recorded in stereo.


- Close the flash. (It is recommended that you close the flash when recording motion pictures. However, leaving the flash open will not result in a significant difference in sound quality.)

### 1 Select the mode.

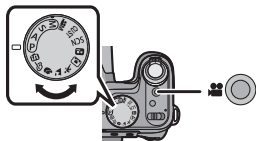

### 2 Start recording by pressing the motion picture button.

- (A) Available recording time
- (B) Elapsed recording time
- Release the motion picture button right after you press it.
- The recording state indicator (red) will flash while recording motion pictures.

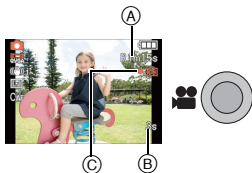

### 3 Stop the recording by pressing the motion picture button again.

- If the built-in memory or the card becomes full in the middle of recording, the camera stops recording automatically.


#### Note

- Motion pictures can be recorded continuously for up to 29 minutes 59 seconds. Also, motion picture recorded continuously in [MOTION JPEG] is up to 2 GB. (Example: [8m 20s] with ) Remaining time for continuous recording is displayed on the screen.


[PLAYBACK] Mode: 

## Playing back Pictures ([NORMAL PLAY])

**1** Press .

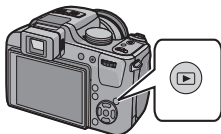

**2** Press   to select the picture.

- After selecting the motion picture, press  to start playback.



[PLAYBACK] Mode: 

## Deleting Pictures

**Once deleted, pictures cannot be recovered.**

- Pictures on the built-in memory or the card, which are being played back will be deleted.

**1** Select the picture to be deleted, and then press .



**2** Press  to select [YES] and then press [MENU/SET].




# Reading the Operating Instructions (PDF format)

- You have practised the basic operations introduced in these operating instructions and want to progress to advanced operations.
- You want to check the Troubleshooting.

In these kinds of situations refer to Operating Instructions (PDF format) contained on the CD-ROM (supplied).

## ■ For Windows

- 1** Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied).
- 2** Select the desired language and then click [Operating Instructions] to install.
- 3** Double click the “Operating Instructions” shortcut icon on the desktop.

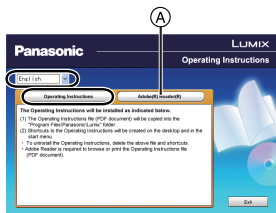

## ■ When the Operating Instructions (PDF format) will not open

You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to browse or print the Operating Instructions (PDF format).

Insert the CD-ROM containing the Operating Instructions (supplied), click (A) and then follow the messages on the screen to install.

(Compatible OS: Windows 2000 SP4/Windows XP SP2 or SP3/Windows Vista SP1 or SP2/Windows 7)

- You can download and install a version of Adobe Reader that you can use with your OS from the following Web Site.

<http://get.adobe.com/reader/otherversions>

## ■ To uninstall the Operating Instructions (PDF format)

Delete the PDF file from the "Program Files\Panasonic\Lumix\" folder.

- When the contents in the Program Files folder cannot be displayed, click the [Show the contents of this folder] to display them.

## ■ For Macintosh

- 1** Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied).
- 2** Open the "Manual" folder in the CD-ROM and then copy the PDF file with the desired language inside the folder.
- 3** Double click the PDF file to open it.

# Specifications

**Digital Camera:** Information for your safety

**Power Source:** DC 8.4 V

**Power**

**Consumption:** 1.3 W (When recording with LCD Monitor)  
1.1 W (When recording with Viewfinder)  
0.7 W (When playing back with LCD Monitor)  
0.5 W (When playing back with Viewfinder)

**Camera effective pixels:**

14,100,000 pixels

**Image sensor:**

1/2.33" CCD, total pixel number 14,500,000 pixels,  
Primary colour filter

**Lens:**

Optical 24× zoom  $f = 4.5 \text{ mm to } 108 \text{ mm}$

35 mm film camera conversion:

25 mm to 600 mm (4:3),

27 mm to 654 mm (still pictures 16:9),

29 mm to 693 mm (motion pictures 16:9),

26 mm to 624 mm (3:2),

30 mm to 709 mm (1:1)

Wide end: F2.8 to F8.0

(when recording motion pictures: F2.8 to F11)

Tele end: F5.2 to F8.0

(when recording motion pictures: F5.2 to F11)

**Digital Zoom:**

Max. 4×

**Extra optical zoom:**

Max. 50.6×

(When set to 3,000,000 pixels [3M] or less)



<b>Focus range:</b>	AF: 30 cm (0.99 feet) (Wide)/2 m (6.57 feet) (Tele) to $\infty$ AF Macro/MF/Intelligent Auto: 1 cm (0.04 feet) (Wide)/1 m (3.28 feet) (Tele) to $\infty$ Scene Mode: There may be differences in the above settings.
<b>Shutter system:</b>	Electronic shutter+ Mechanical shutter
<b>Burst recording</b>	
<b>Burst speed:</b>	Approx. 1.8 pictures/second
<b>Number of recordable pictures:</b>	Max. 5 pictures (Standard), Max. 3 pictures (Fine).
<b>Hi-speed burst</b>	
<b>Burst speed:</b>	Approx. 10 pictures/second (Speed priority) Approx. 6 pictures/second (Image priority) [3M (4:3), 2.5M (3:2), 2M (16:9) or 2.5M (1:1) is selected as the picture size.]
<b>Number of recordable pictures:</b>	Approx. 15 to 100
<b>Minimum illuminance:</b>	Approx. 6 lx (when i-low light is used)
<b>Shutter speed</b>	
<b>Still picture:</b>	60 seconds to 1/2000th of a second [STARRY SKY] Mode: 15 seconds, 30 seconds, 60 seconds
<b>Motion pictures:</b>	1/30 to 1/20000th of a second Creative Motion Picture Mode (Manual Exposure/Manual Focus): 1/8 to 1/20000th of a second
<b>Exposure (AE):</b>	Programme AE (P)/Aperture-Priority AE (A)/ Shutter-Priority AE (S)/Manual Exposure (M) Exposure compensation (1/3 EV Step, -3 EV to +3 EV)
<b>Metering mode:</b>	Multiple/Centre weighted/Spot

<b>LCD monitor:</b>	3.0" TFT LCD (3:2) (Approx. 230,000 dots) (field of view ratio about 100%)
<b>Viewfinder:</b>	Colour LCD Viewfinder (Approx. 202,000 dots) (field of view ratio about 100%) (with diopter adjustment -4 to +4 diopter)
<b>Flash:</b>	Built-in pop up flash Flash range: [ISO AUTO] Approx. 30 cm (0.99 feet) to 9.5 m (31.16 feet) (Wide) AUTO, AUTO/Red-eye reduction, Forced flash ON (Forced ON/Red-eye reduction), Slow sync./Red-eye reduction, Forced flash OFF
<b>Microphone:</b>	Stereo
<b>Speaker:</b>	Monaural
<b>Recording media:</b>	Built-in Memory (Approx. 40 MB)/SD Memory Card/SDHC Memory Card/SDXC Memory Card
<b>Recording file format</b>	
<b>Still Picture:</b>	JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard)/RAW, DPOF corresponding
<b>Motion pictures     with audio:</b>	AVCHD Lite/QuickTime Motion JPEG
<b>Interface</b>	
<b>Digital:</b>	"USB 2.0" (High Speed) * Data from the PC can not be written to the camera using the USB connection cable.
<b>Analogue video/     audio:</b>	NTSC/PAL Composite (Switched by menu) Audio line output (stereo)
<b>Terminal</b>	
<b>[AV OUT/DIGITAL]:</b>	Dedicated jack (14 pin)
<b>[HDMI]:</b>	MiniHDMI TypeC

**Dimensions:** Approx. 120.3 mm (W)×79.8 mm (H)×91.9 mm (D)  
[4.74" (W)×3.14"(H)×3.62" (D)]  
(excluding the projecting parts)

**Mass:** Approx. 498 g/1.10 lb (with card and battery)  
Approx. 454 g/1.00 lb (excluding card and battery)

**Operating temperature:** 0 °C to 40 °C (32 °F to 104 °F)

**Operating humidity:** 10%RH to 80%RH

### **Battery Charger**

**(Panasonic DE-A84A):** Information for your safety

<b>Input:</b>	AC ~ 110 V to 240 V, 50/60 Hz, 0.15 A
<b>Output:</b>	DC = 8.4 V, 0.43 A

### **Battery Pack (lithium-ion)**

**(Panasonic DMW-BMB9E):** Information for your safety

<b>Voltage/capacity:</b>	7.2 V/895 mAh
--------------------------	---------------

- SDXC Logo is a trademark of SD-3C, LLC.
- The "AVCHD", "AVCHD Lite" and the "AVCHD", "AVCHD Lite" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories.  
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- Other names, company names, and product names printed in these instructions are trademarks or registered trademarks of the companies concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

**AVCHD** Lite™

**HDMI**

**VIERA**  
Link

**DOLBY**  
DIGITAL  
STEREO CREATOR



Pursuant to the directive 2004/108/EC, article 9(2)  
Panasonic Testing Centre  
Panasonic Marketing Europe GmbH  
Winsbergring 15, 22525 Hamburg, Germany

VQT2X28

F0710YS0 ( 9000 (A) )

**Panasonic Corporation**

Web Site: <http://panasonic.net>

© Panasonic Corporation 2010